

Programming the Kenwood TM-V71A

Frequency Selection

1. Press [VFO] to enter VFO mode
2. Using the [UP]/[DWN] buttons on the mike (or by turning the [Tuning] control enter the desired frequency.

Offset

1. Set the offset (+ or -) by pressing [F], [REV] until the proper offset symbol appears (-, +. or blank).

Tone

1. Activate the Tone function as needed by pressing [Tone] until the desired tone is displayed (none, CT, DCS, or T).
2. Select the tone frequency by pressing [F], [Tone]. Rotate the Tuning control to select the desired frequency.
3. Press any key other than the Tuning control and [F} (ESC) to set the tone.

Storing in Memory Channel

1. Press [F], a memory channel will appear, rotate the Tuning control until the desired channel number appears.
2. Press [MR] to store the data.

Naming a Memory Channel

1. Press [MR] to enter the Memory Mode.
2. Rotate the Tuning Control to select the desired channel.
3. Enter the Menu mode by pressing [F], tuning control and then rotate the tuning control until "MNAME" appears.
4. Press the Tuning control then rotate the tuning control to select character. Press tuning control to move on the next character.
5. Press [F] (ESC) to exit.

Clearing Memory Channel

1. Press [MR] to enter Memory recall, rotate Tuning to select desired channel, turn off radio, while holding [MR] turn Power On, message will appear "Clear?" press tuning control to clear channel.

